



# E-Socks Tester Installation Manual





# I . Install E-Socks Tester, Connect and Run



# I . Install E-Socks Tester, Connect and Run



① Access the KPNP homepage

The screenshot shows the KPNP homepage with five main navigation categories: media, technology, equipment, KPNP, and customer service center. The 'customer service center' category contains a 'Download' link, which is highlighted with a red box and a yellow callout '② Click'.

## Download

	Title	File	Date
Notice	[KPNP] Court operation English version program with round system, the new 2023 WT game rule (Ver 2.0.14h4)		2023-10-06
Notice	[KPNP] Court operation Korean version program with round system, the new 2022 WT game rule (Ver 2.0.7Beta_0603)		2023-10-06
Notice	[KPNP] Receiver USB_Driver_N		2022-10-06
Notice	[KPNP] E-Sock Tester Program		2023-01-25

③ Click

# I . Install E-Socks Tester, Connect and Run



## ← Download

Notice **[KPNP] E-Sock Tester Program**

2023-01-25

Attachments

2. eSocksTester\_Kpnp v1.5.zip



④ Click

Hello, this is KPNP.


This is the foot protector tester program eSocksTester\_Kpnp v1.5.

Please download the attached file below.

1. Download the e FOOT SCANNER\_CP210x\_VCP\_Win\_XP\_S2K3\_Vista\_7 program.
2. Run the eSocksTester program.

⑤ Double-click to install

⑥ Double-click to install and run

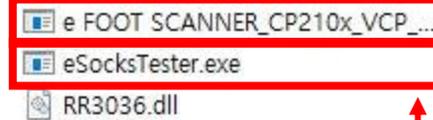

# I . Install E-Socks Tester, Connect and Run

e-Socks Tester Ver 1.5



## E-Socks Tester

Move your foot back and front if there's no reaction from tester



### \*How to scan

- Put your foot on the tester and move slowly back and front
- Move your foot back and front if there's no reaction from tester
- 발을 테스터기에 올려 놓고 천천히 앞 뒤로 움직이세요.
- 반응이 없으면 좀 더 앞 뒤로 움직입니다.

Connect

AUTO

⑦ Click to Connect



CLICK TO SCAN

### \*Warning

- Do not wear E Foot protectors with shoes on.
- No compensation will be followed in case tag is damaged by wearing E Foot protectors with shoes.

# I . Install E-Socks Tester, Connect and Run

e-Socks Tester Ver 1.5



## E-Socks Tester

Move your foot back and front if there's no reaction from tester



⑧ When connected, a number appears to confirm the number of sensors.

### \*How to scan

- Put your foot on the tester and move slowly back and front
- Move your foot back and front if there's no reaction from tester
- 발을 테스터기에 올려 놓고 천천히 앞 뒤로 움직이세요.
- 반응이 없으면 좀 더 앞 뒤로 움직입니다.

Disconnect

AUTO

0



CLICK TO SCAN

### \*Warning

- Do not wear E Foot protectors with shoes on.
- No compensation will be followed in case tag is damaged by wearing E Foot protectors with shoes.



## II. How to fix a malfunction



## II. How to fix a malfunction

e-Socks Tester Ver 1.5




### E-Socks Tester

Move your foot back and front if there's no reaction from tester



#### \*How to scan

- Put your foot on the tester and move slowly back and front
- Move your foot back and front if there's no reaction from tester
- 발을 테스터기에 올려 놓고 천천히 앞 뒤로 움직이세요.
- 반응이 없으면 좀 더 앞 뒤로 움직입니다.

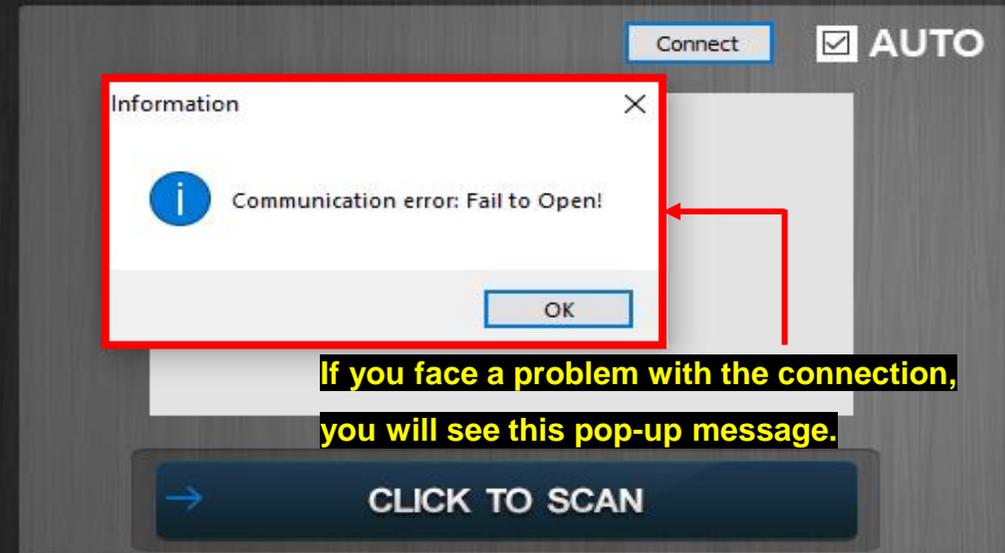


**If you face a problem with the connection, you will see this pop-up message.**



#### \*Warning

- Do not wear E Foot protectors with shoes on.
- No compensation will be followed in case tag is damaged by wearing E Foot protector with shoes.



# II. How to fix a malfunction

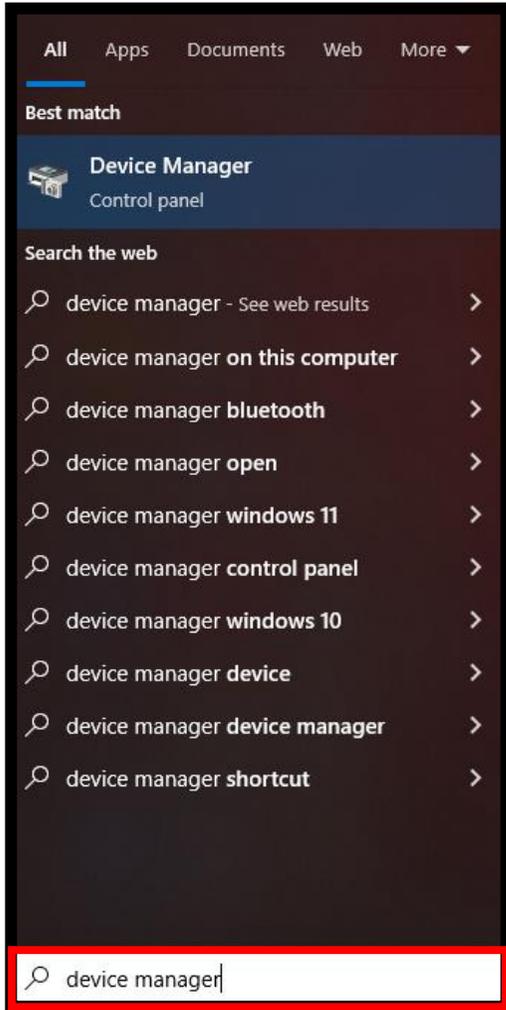

 **① Enter device manager in the window**

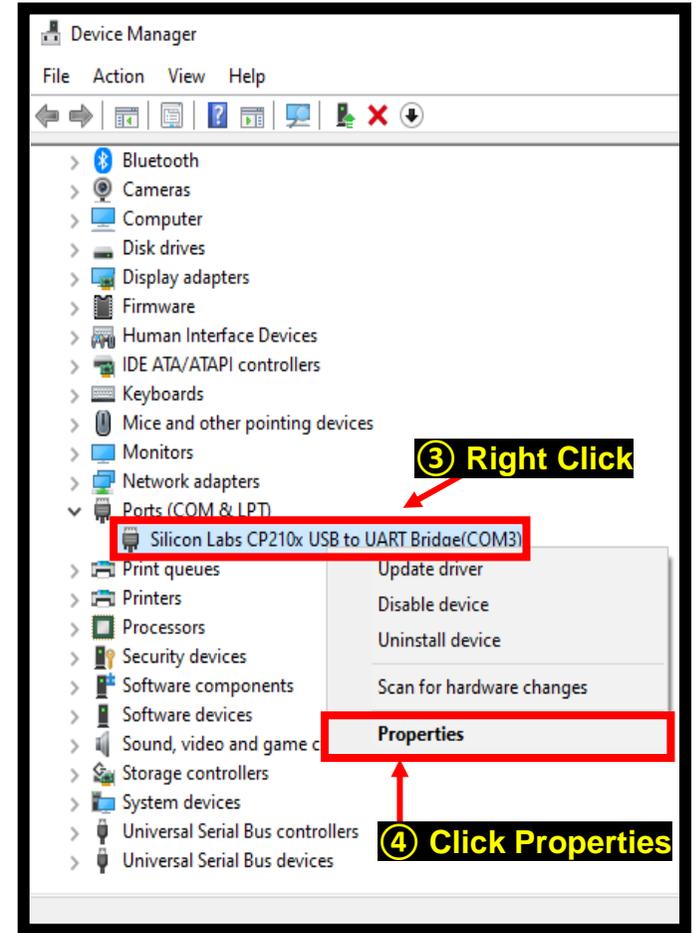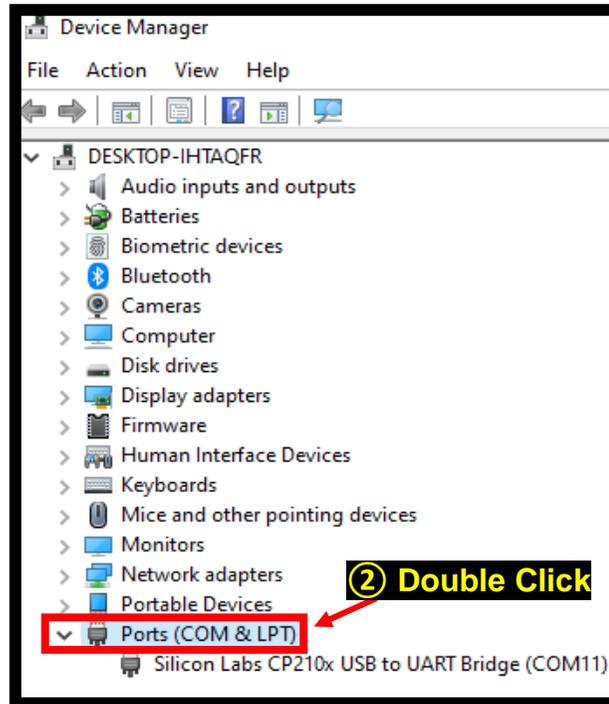


## II. How to fix a malfunction

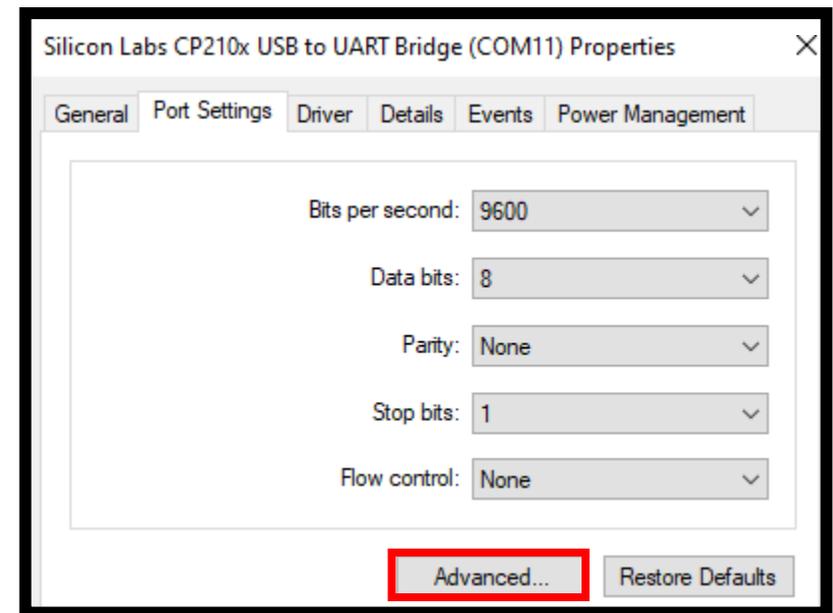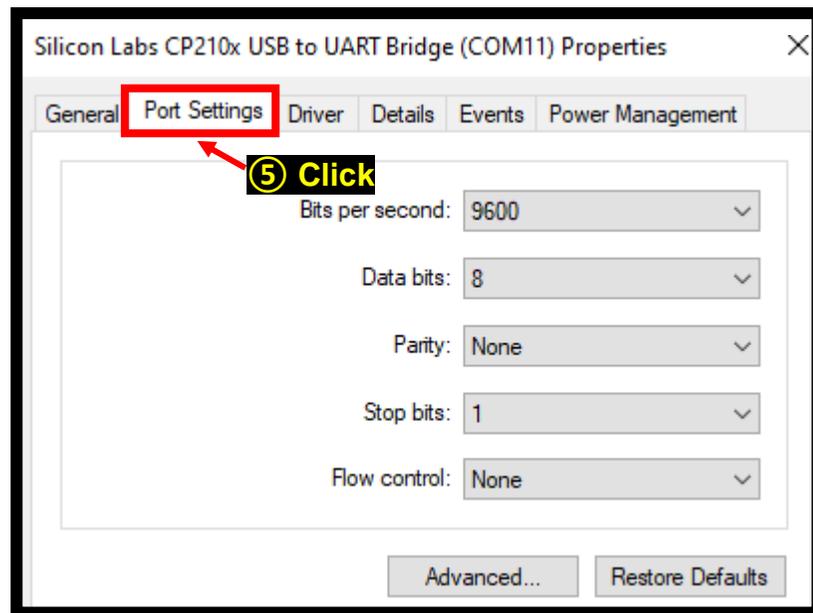


6 Click

## II. How to fix a malfunction

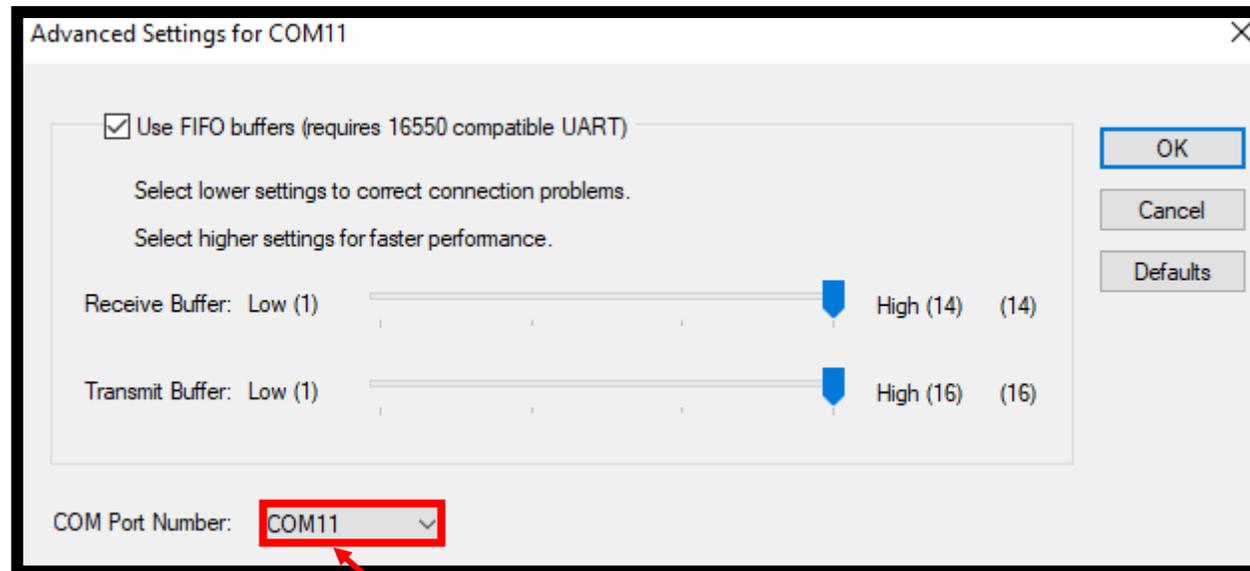

**⑦ Click**



**⑧ Set the comport number to 10 or less**



**THANK YOU!**